

FLIGHT PLANS

To Create a New Flight Plan

1. Press **FPL** and rotate the small right knob (⏪) to display the flight plan catalog.
2. Press **MENU** to display the flight plan catalog options.
3. Rotate the large right knob (⏩) to highlight "Create New Flight Plan?" and press **ENT**.
4. A blank flight plan page will appear for the first empty storage location. Use the small (⏪) and large (⏩) right knobs to enter the identifier of the departure waypoint and press **ENT**.
5. Repeat step #4 above to enter the identifier for each additional flight plan waypoint. Once all waypoints have been entered, press the small right knob (⏪) to return to the flight plan catalog.



To Navigate a Flight Plan

1. Press **FPL** and rotate the small right knob (⏪) to display the flight plan catalog.
2. Press the small right knob (⏪) to activate the cursor and rotate the large right knob (⏩) to highlight the desired flight plan.
3. Press **MENU** to display the flight plan catalog options.
4. Rotate the large right knob (⏩) to highlight "Activate Flight Plan?" and press **ENT**.



To Stop Navigating a Flight Plan

1. Press **FPL**.
2. Press **MENU** to display the flight plan options.
3. Rotate the large right knob (⏩) to highlight "Delete Flight Plan?" and press **ENT**. Press **ENT** again to confirm.



To Edit a Flight Plan

1. Press **FPL** and rotate the small right knob (⏪) to display the flight plan catalog.
2. Press the small right knob (⏪) to activate the cursor.
3. Rotate the large right knob (⏩) to highlight the desired flight plan and press **ENT**.
4. To add a waypoint to the flight plan: Rotate the large right knob (⏩) to select the point where you wish to add the new waypoint. (If an existing waypoint is highlighted, the new waypoint will be placed directly in front of this waypoint.) Use the small (⏪) and large (⏩) right knobs to enter the identifier of the new waypoint and press **ENT**.
5. To delete a waypoint from the flight plan: Rotate the large right knob (⏩) to select the waypoint you wish to delete and press **CLR** to display a "remove waypoint" confirmation window. With "Yes" highlighted, press **ENT** to remove the waypoint.
6. Once all changes have been made, press the small right knob (⏪) to return to the flight plan catalog.