


# PAGE SELECTION

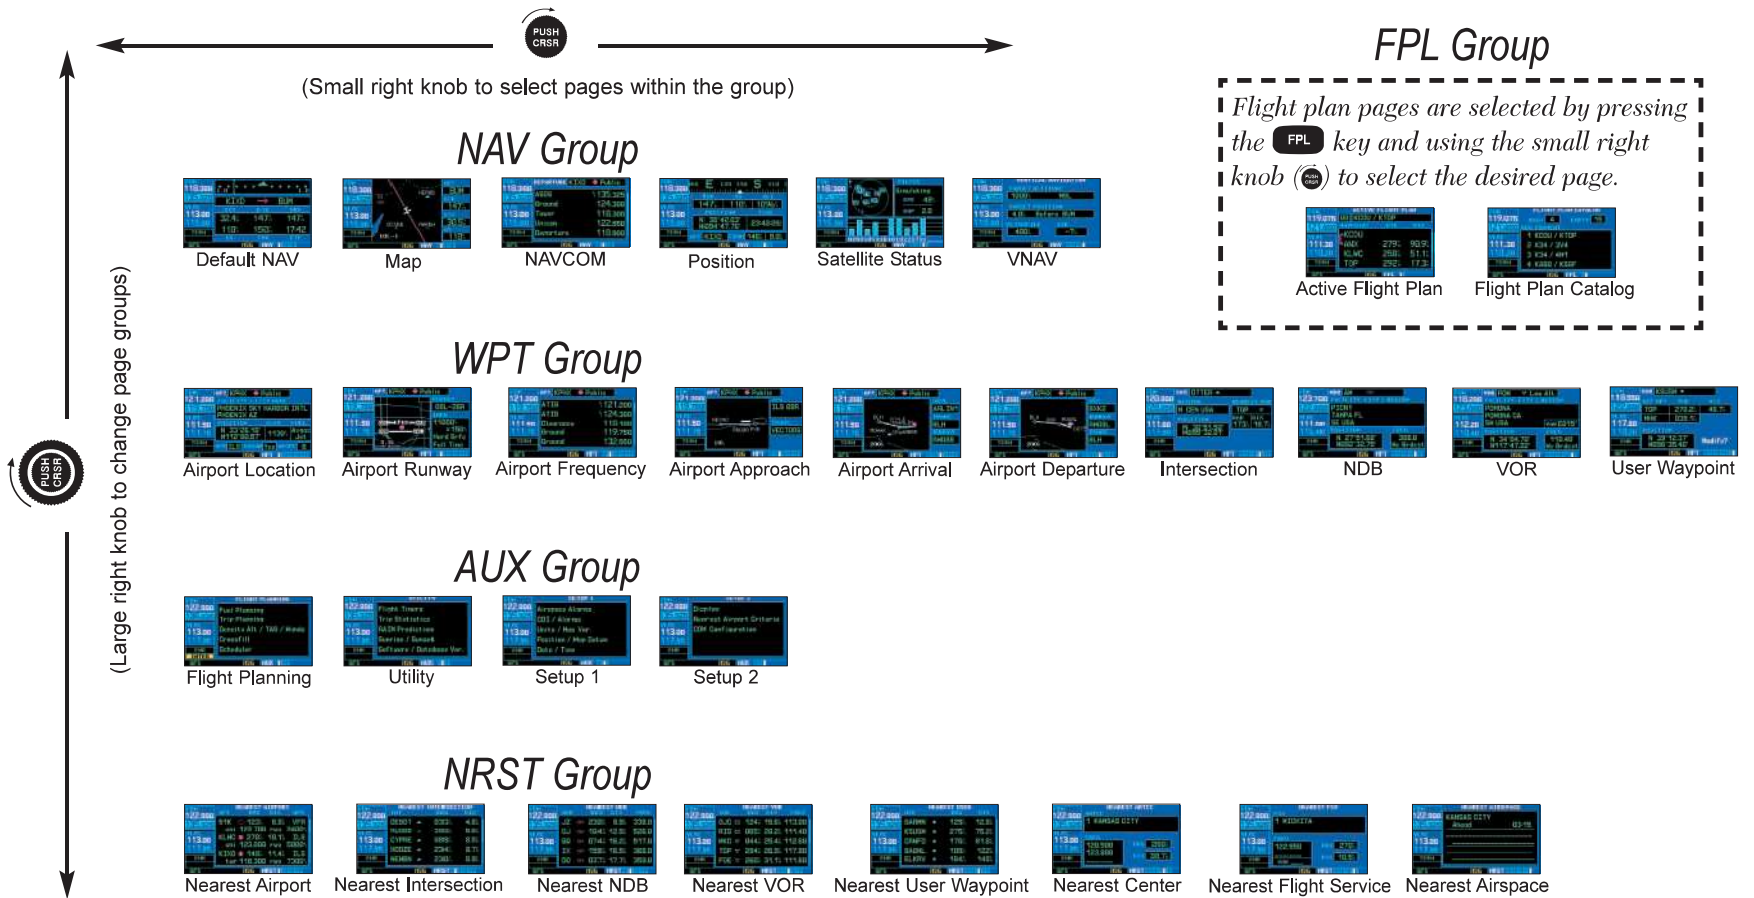

Selection of any main page is performed using the large (⊖) and small (⊖) right knobs. The large right knob (⊖) selects the page group: NAV, WPT, AUX or NRST. The small right knob (⊖) selects the desired page within a group. To quickly select the default NAV page, press and hold **CLR**.