

NAVCOM PAGE / ANNUNCIATORS & MESSAGES

NAVCOM Page



The NAVCOM page provides a list of the airport communication and navigation frequencies at your departure, enroute and arrival airports.

To Select a Frequency List for a Departure, Enroute or Arrival Airport

1. Press the small right knob (Ⓜ) to activate the cursor.
2. Rotate the large right knob (Ⓢ) to place the cursor on the airport identifier field (top line on the NAVCOM page).
3. Rotate the small right knob (Ⓜ) to select the desired airport and press ENT.

To Scroll Through the List of Frequencies

1. Activate the cursor, if not already active, by pressing the small right knob (Ⓜ).
2. Rotate the large right knob (Ⓢ) to move the cursor through the list of frequencies. If there are more frequencies in the list than can be displayed on the screen, a scroll bar along the right-hand side of the screen will indicate which part of the list is currently being displayed.

Auto-Tuning a Frequency from the NAVCOM Page

1. Highlight the desired frequency by scrolling through the list of frequencies, as described in the previous procedure.
2. To place a frequency in the standby field of the COM or VLOC window, highlight the desired frequency and press ENT.

Bottom Row Annunciators and Messages

