

NEAREST AIRPORTS

To View a List of the Nearest Airports

1. From any page, press and hold **CLR** to select the default NAV page. (You may skip this step if you are already viewing any of the main GPS pages.)
2. Rotate the large right knob (⌚) to select the NRST page group. "NRST" will appear in the lower right corner of the screen.
3. If necessary, rotate the small right knob (⌚) to select the nearest airport page.




To Scroll Through the List of Nearest Airports

1. Press the small right knob (⌚) to activate the cursor.
2. Rotate the large right knob (⌚) to scroll through the list. The scroll bar along the right-hand side of the page will indicate which part of the list is currently being viewed.
3. To remove the flashing cursor, press the small right knob (⌚).

To View Additional Information for a Nearby Airport

1. Highlight the identifier of the desired airport by scrolling through the list, as described in the procedure above.
2. Press **ENT** to display the airport location page for the selected airport.

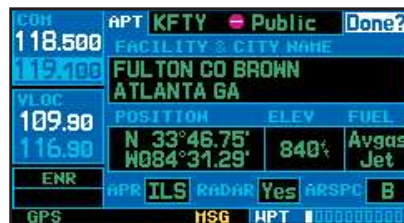

3. To view additional WPT pages for the selected airport (including the airport runway and airport frequency pages) press the small right knob (⌚) to remove the flashing cursor. Rotate the small right knob (⌚) to display the additional WPT pages. When finished, press the small right knob (⌚) to return the flashing cursor to the screen.



4. To return to the nearest airport page, verify that "Done?" is highlighted by the flashing cursor and press **ENT** (or press **CLR**).

To Select a Nearby Airport as a Direct-To Destination

1. Press **▷** to display the select direct-to waypoint page.
2. Rotate the large right knob (⌚) to place the flashing cursor on the nearest airport (NRST) field.
3. Rotate the small right knob (⌚) to display a window, listing up to nine nearest airports.



4. Continue rotating the small right knob (⌚) to highlight the desired airport.
5. Press **ENT** to accept the selected waypoint's identifier and press **ENT** a second time (with "Activate?" highlighted) to begin navigating to the selected waypoint.

To Quickly Tune and Activate the 121.500 Emergency Channel

1. Press and hold **↕** for approximately two seconds.